

**DATA SHEET**



- **Permits easy monitoring of all input/output signals**
- **Commonly used signals are available through BNC connectors**
- **Integrated battery holder and power supply connection**

The Universal Interface Board can be used with the PLDD-75-9-1, PLDD-120-1-1, PLDD-120-12-20D, PLDD-200-1-1, PLDD-200-12-20, and the PLDD-300-1-20. Its purpose is to allow the user convenient access to all the input and output connections.

The UIB-01 comes mounted on a base plate which also accepts any of our drivers. The base plate will bolt to a standard optical bench with 1 inch center to center hole spacing.

 
 
 
 
**OMNIPULSE TECHNOLOGY**

6355 Nancy Ridge Drive, San Diego, CA 92121

Tel: (858) 452-7700 • Fax: (858) 452-8788

Email: [sales@omnipulsetechnology.com](mailto:sales@omnipulsetechnology.com) • <http://www.omnipulsetechnology.com>

**PHYSICAL DIMENSIONS\***

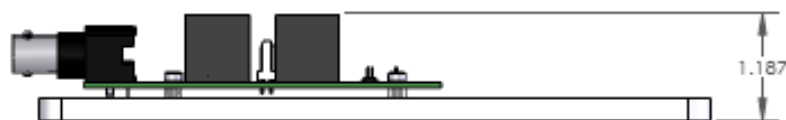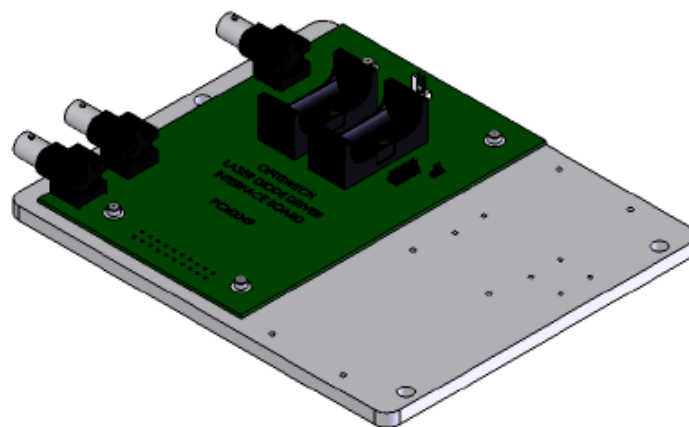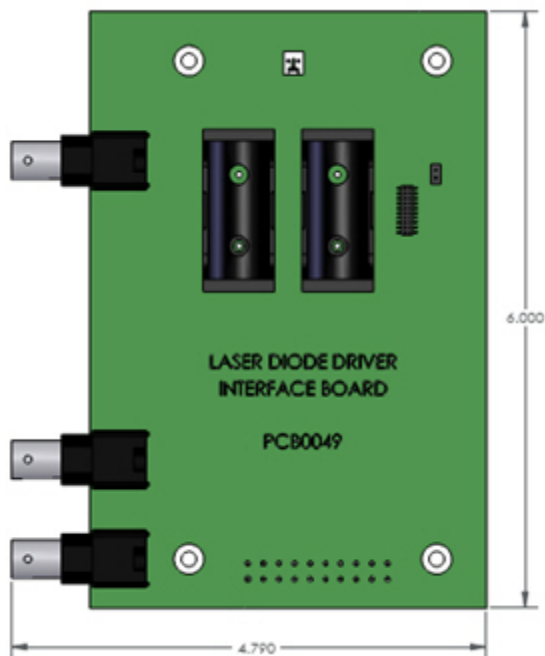

*\*Dimensions subject to change without notice.*

**OMNIPULSE TECHNOLOGY**  
6355 Nancy Ridge Drive, San Diego, CA 92121  
Tel: (858) 452-7700 • Fax: (858) 452-8788  
Email: [sales@omnipulsetechnology.com](mailto:sales@omnipulsetechnology.com) • <http://www.omnipulsetechnology.com>